
INTERACTIVE DISPLAY



PN-LB653
PN-LB753
PN-LB863

MODEL

Dismantle Instruction

Table of contents

1. Scope 3
2. Tools for dismantling 3
3. Dismantle Procedure 3
4. Batteries 3
5. Back covers 4
6. PWB and other electronic components 7
(1) MAIN PWB 7
(2) POWER PWB 8
(3) T-CON PWB 10
(4) KEY PWB 11
(5) IR Receiver/Indicator LED PWB 11
(6) Speaker 12
(7) OPS board 12
7 LCD Module bezels/angles 13
8 Capacitors 15
9 Parts List 16

1. Scope

This document describes dismantling instruction according to Annex VII of Directive 2012/19/EU.

2. Tools for dismantling

- **Screw Driver**
- **Nipper**

3. Dismantle Procedure

This product can be dismantled by below steps.

1. Remove Back covers (section 5)
2. Remove Printed circuit boards (section 6)
3. Dismantle LCD (section 7)
4. Remove Electrolyte Capacitors (section 8)

4. Batteries


This model uses only AAA battery for remote control.
Battery can easily be removed.




5. Back covers


back cover can be removed by screw driver.


PN-LB653

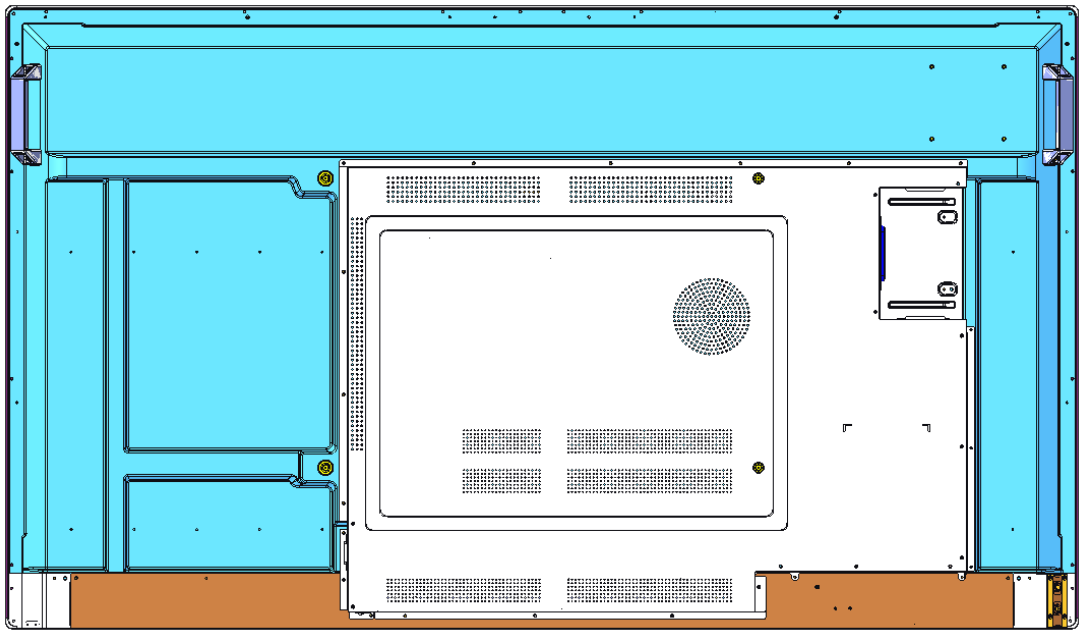

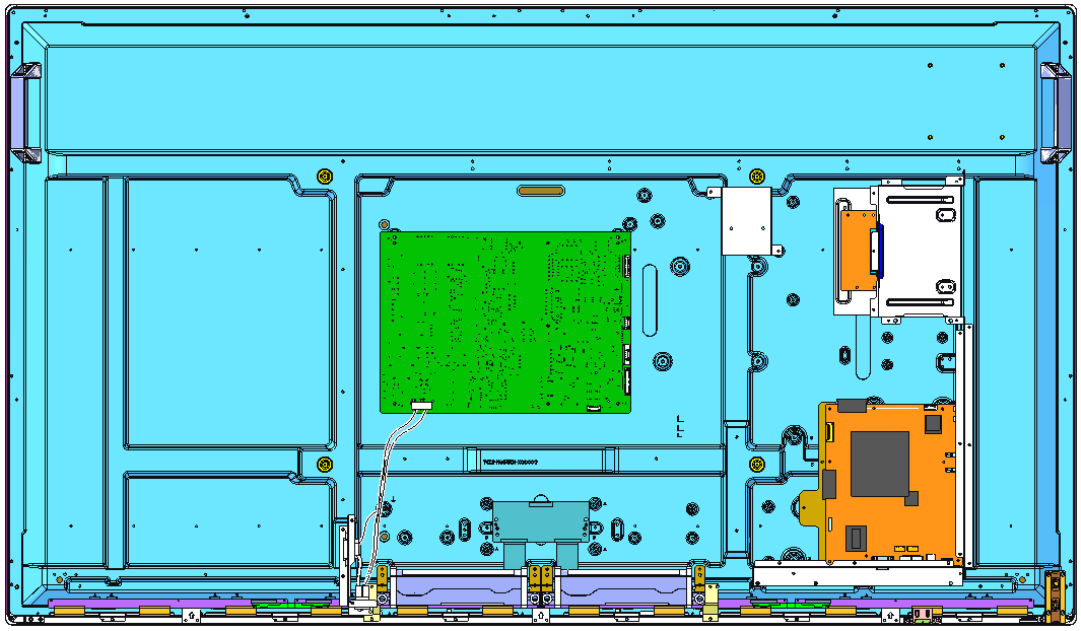



PN-LB753

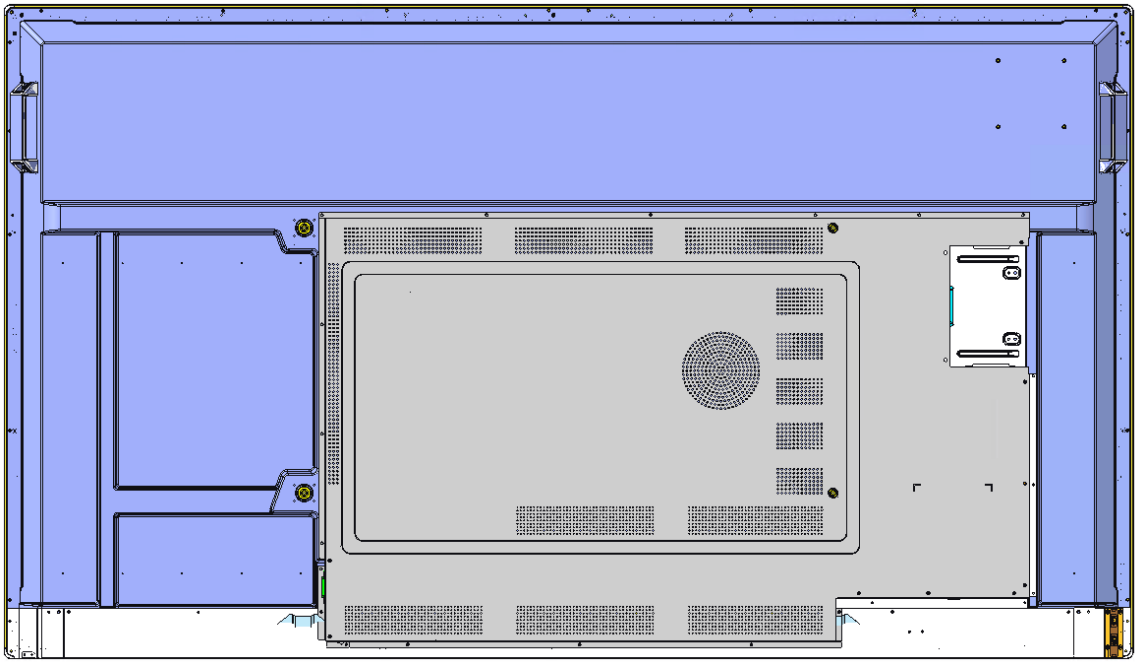

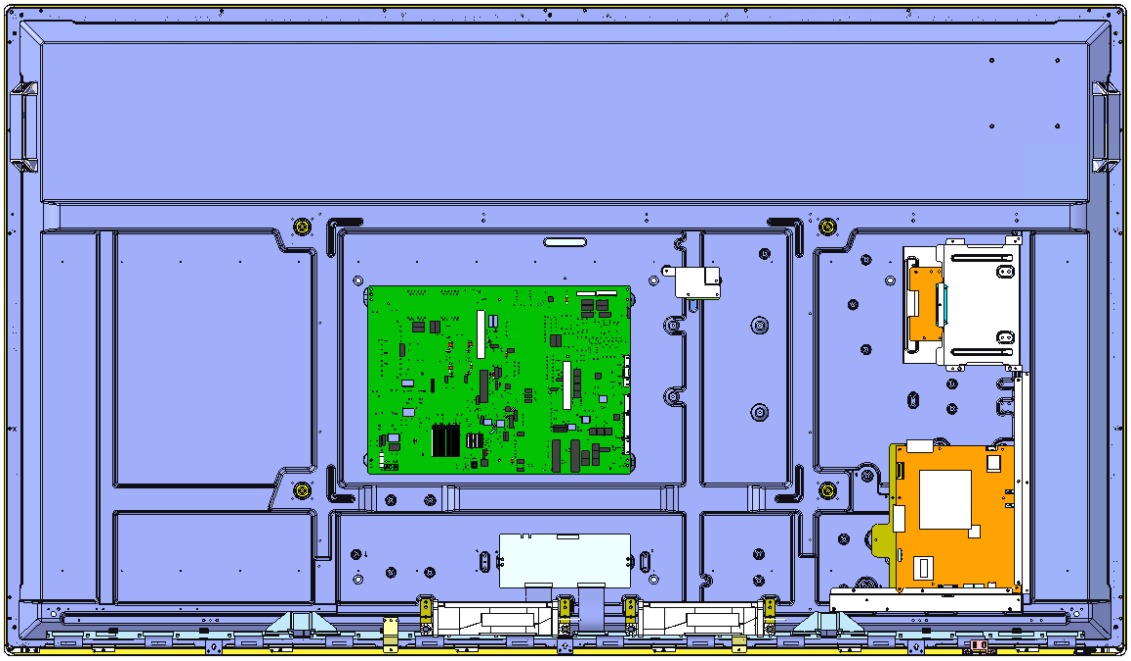

PN-LB863

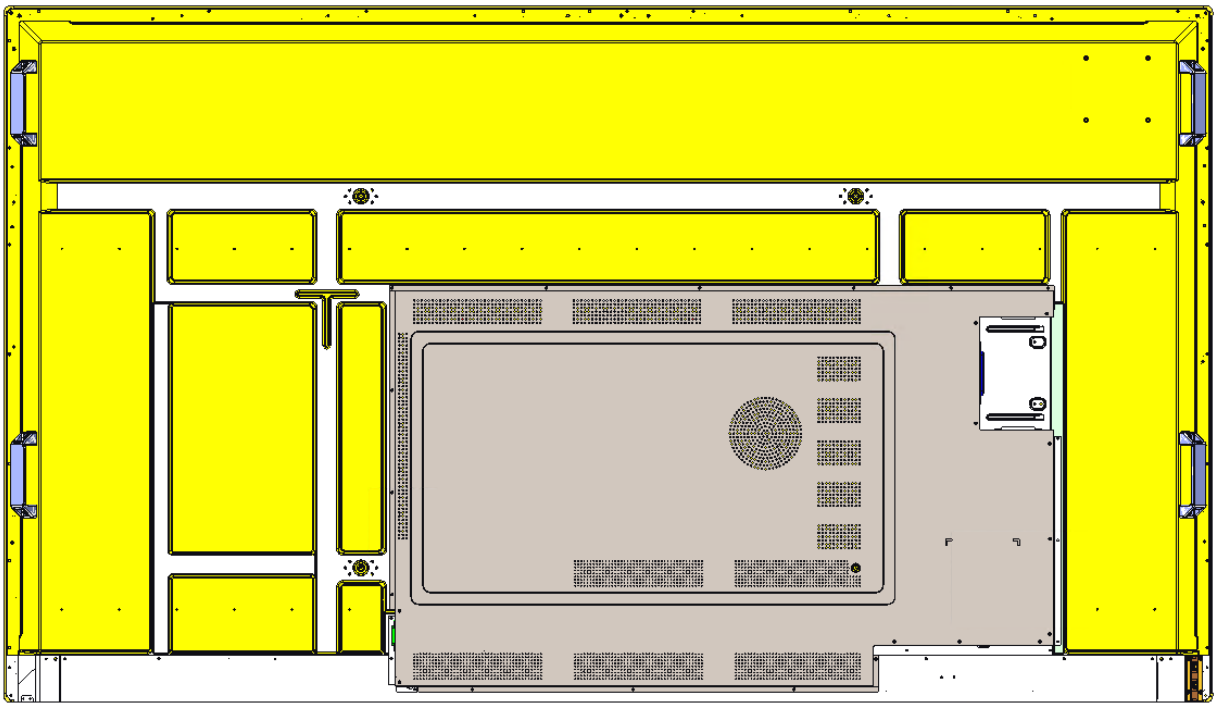


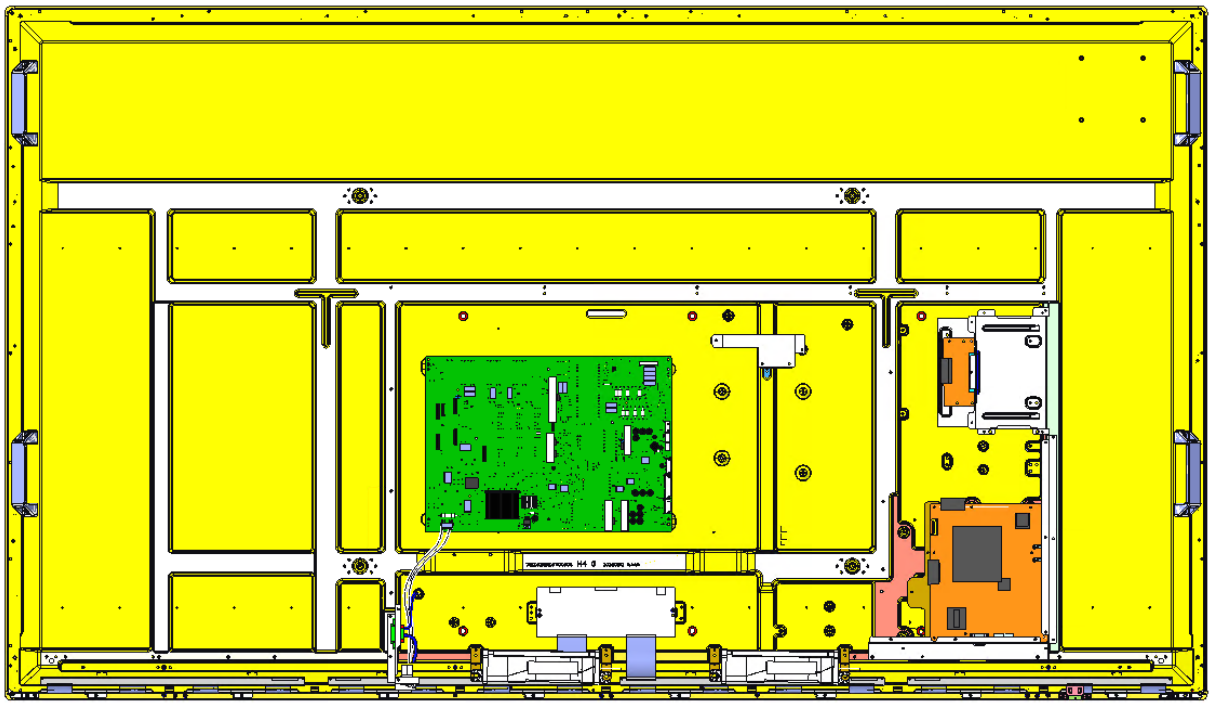

6. PWB and other electronic components


All electronic components can be removed by screw driver.

(1) MAIN PWB

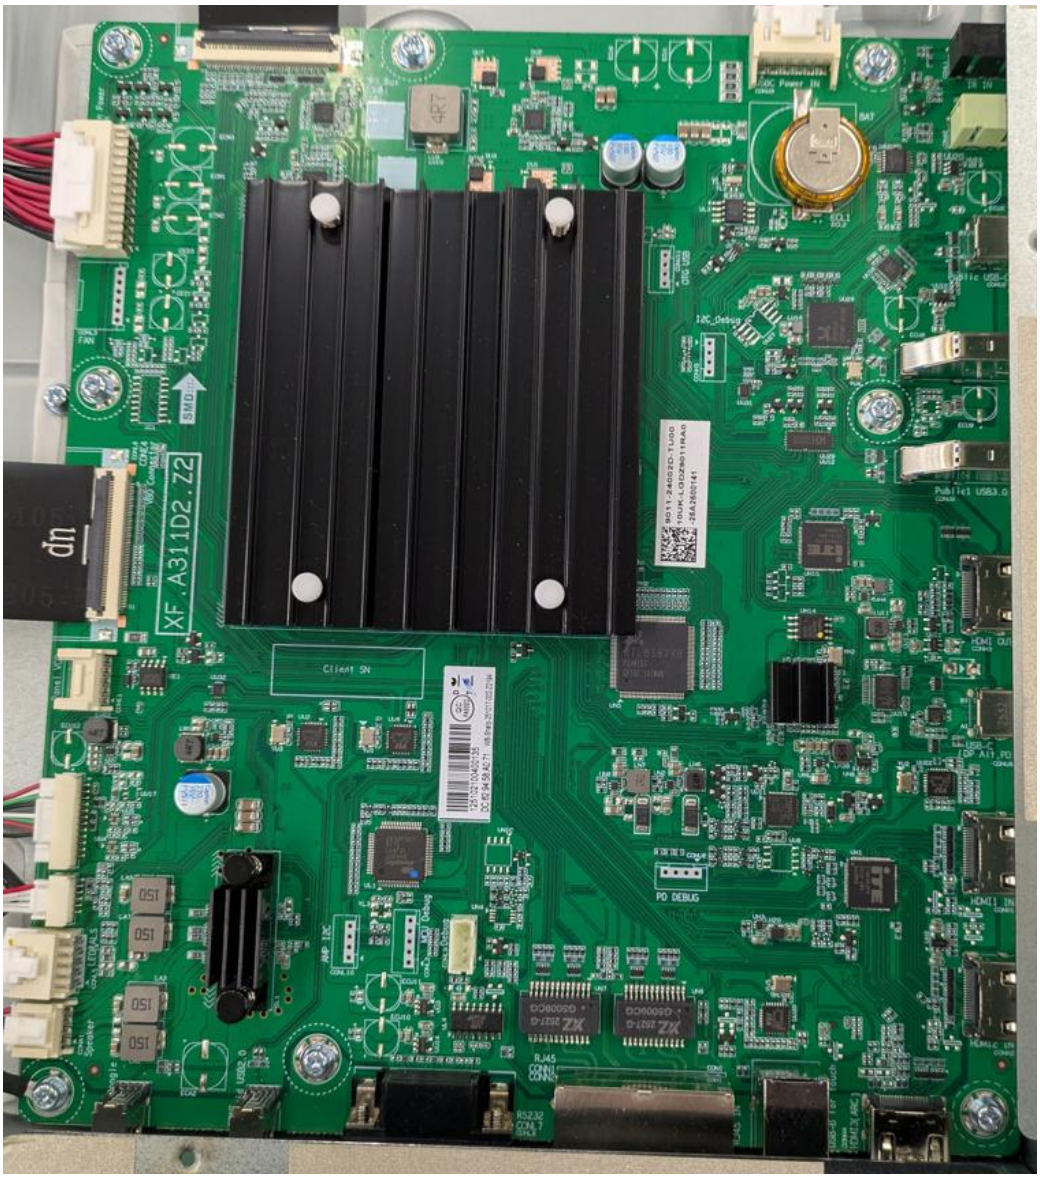


(2) POWER PWB


PN-LB653

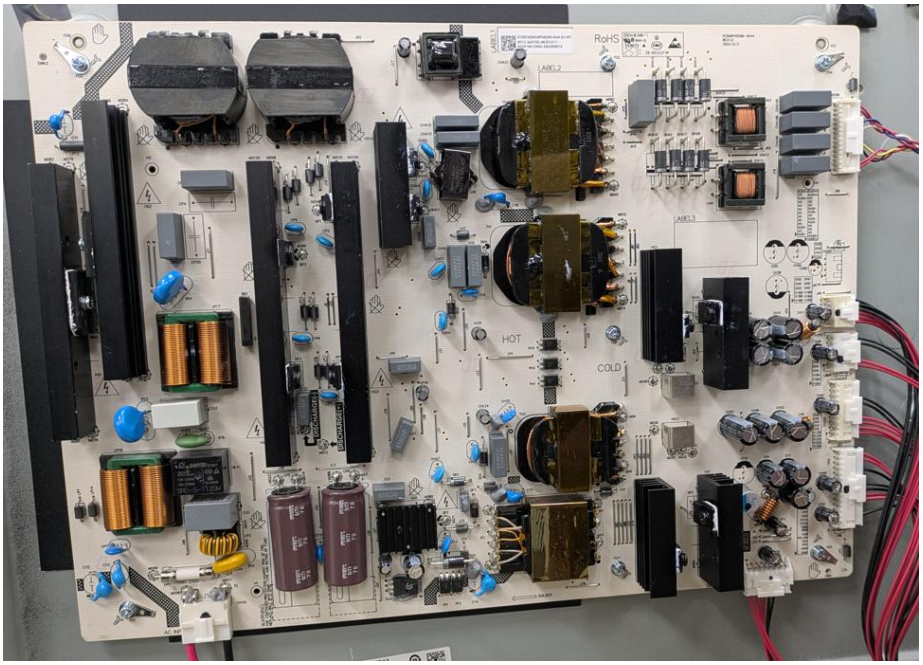

PN-LB753

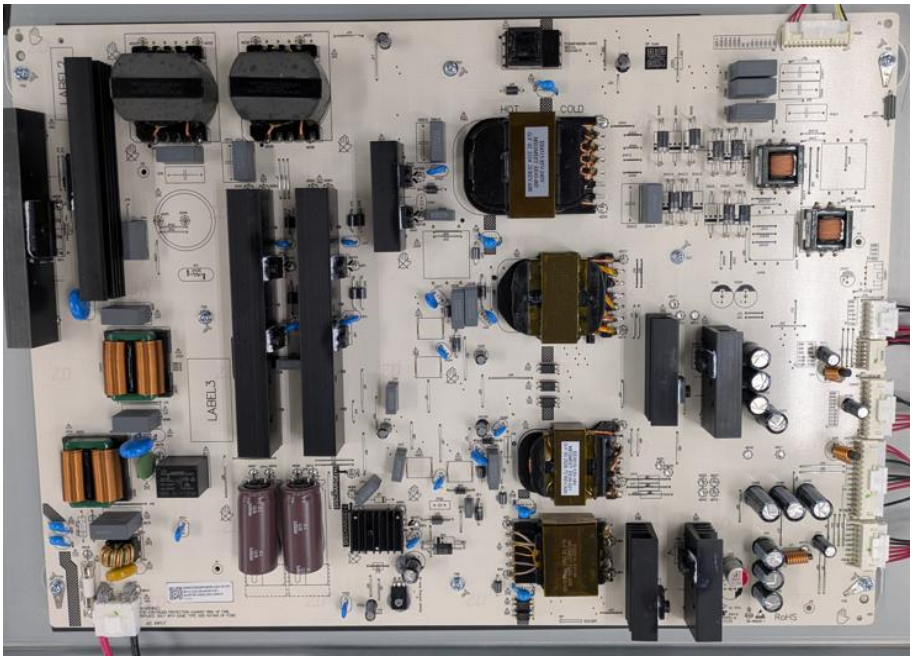

PN-LB863

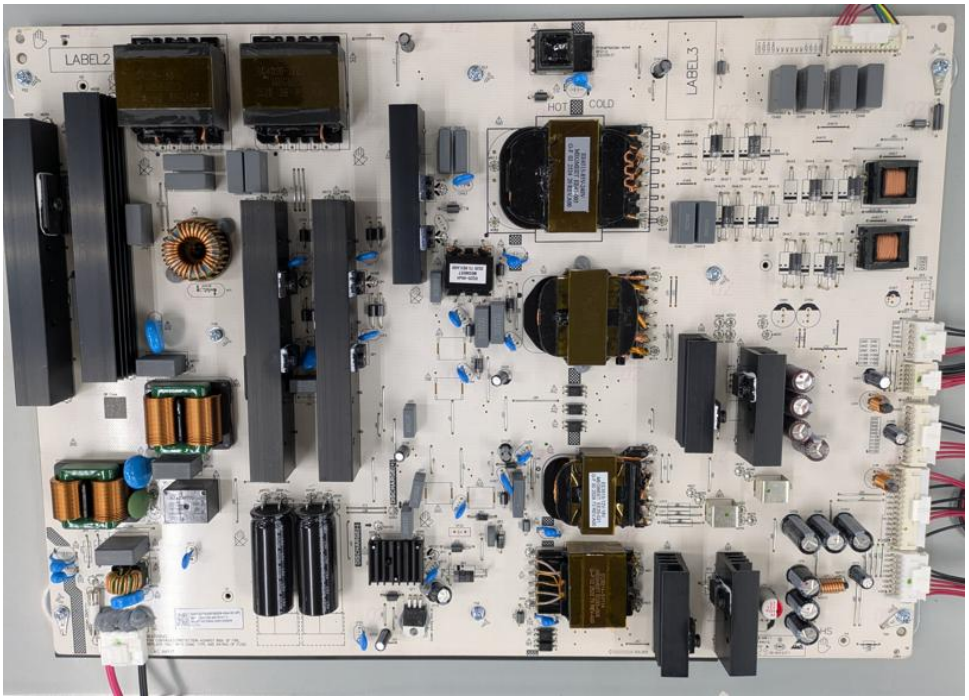

(3) T-CON PWB

PN-LB653



PN-LB753



PN-LB863



(4) KEY PWB



(5) IR Receiver/Indicator LED PWB



(6) Speaker




(7) OPS board




7 LCD Module bezels/angles


PN-LB653

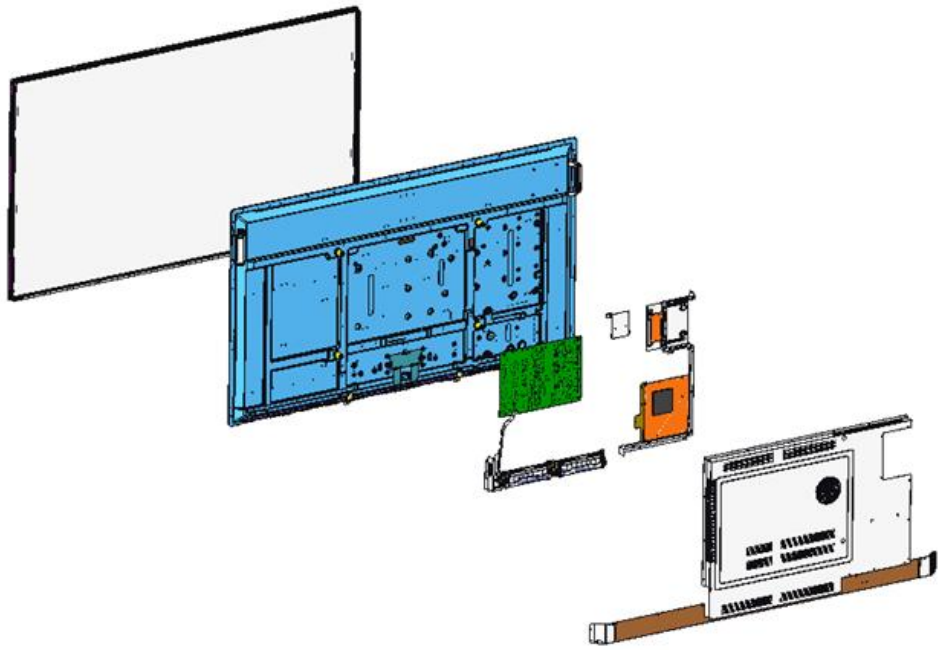

PN-LB753

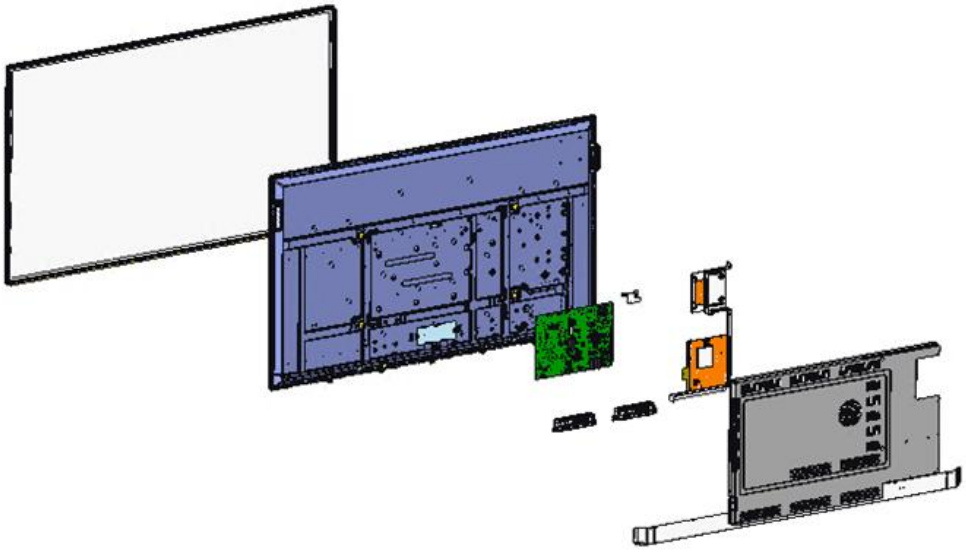


PN-LB863

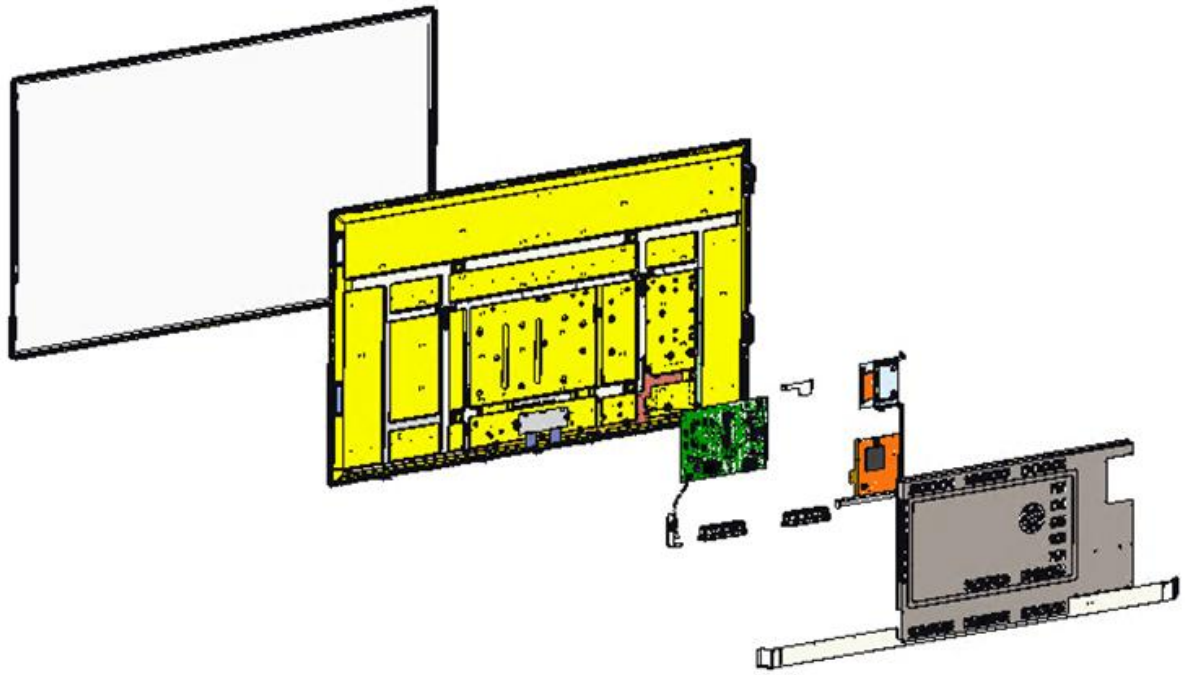


8 Capacitors

Capacitors which diameter is larger than 25mm is installed on the Power PWB.
And these capacitors can be removed by using nipper to cut the leads.


PN-LB653

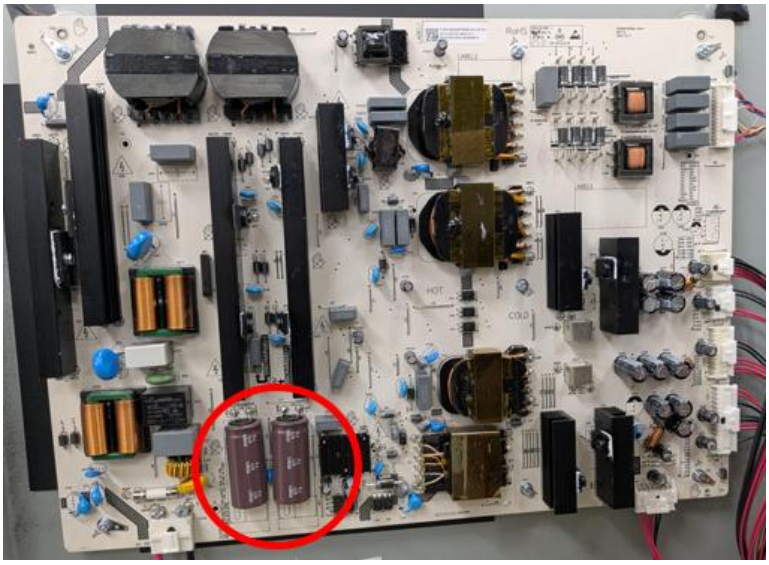

PN-LB753

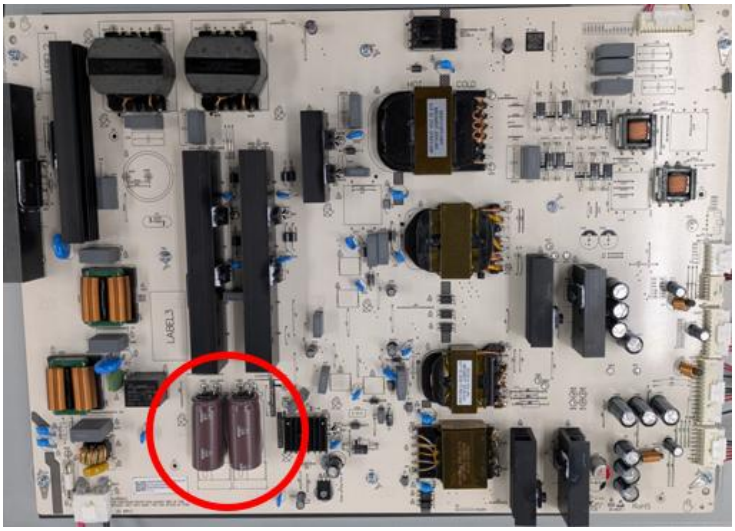

PN-LB863

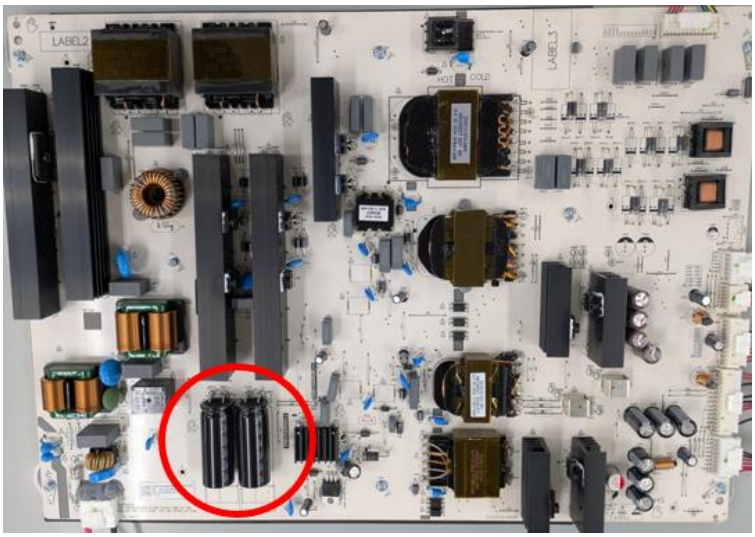

9 Parts List

The spare parts listed in the column "Spare Parts" below are kept available in accordance to legal requirements of EU Regulation
2019/2021 for professional repairer.

Spare Part	Part Name/ Element of Part
a. Internal power board	Power PWB
b. Connectors to connect external equipment	Main PWB
c. Batteries and Accumulators	Battery (AAA) of remote control
d. DVD/Blue-Ray module	not applicable
e. HD/SSD module	not applicable